

Motor Parameters

Version:

Basic control of the cool muscle motor is performed by adjusting a set of basic parameters in the motor. These are: Speed, Acceleration, Position, and Torque. All of these parameters can be edited manually on the fly in [Direct Mode](#), or automatically adjusted inside of a [Program or Logic bank](#).

Pages

- [Acceleration](#)
- [Direction](#)
- [Position](#)
- [Speed](#)
- [Status and Error States](#)
- [Torque](#)
- [Motor Type](#)
- [Motor Specifications](#)